



GALLON TRIGGER SPRAYER INSTRUCTIONS

INSTALLING AND PRIMING SPRAYER

1. Remove cap from gallon container.
2. Feed hose into gallon container until hose reaches the bottom of the container.
3. Place the cone-shaped container plug into the opening of the gallon container and press down to secure a firm, tight fit.
4. Open adjustment nozzle two complete revolutions.
5. Operate the trigger mechanism until the product begins to spray (approximately 20 to 30 times).

REPAIRING A NON-FUNCTIONAL TRIGGER SPRAYER

6. If sprayer does not begin to pump product, remove the complete trigger sprayer assembly from the gallon container. Allow product to drain back into gallon container. Remove nozzle cover and check holes for obstructions in nozzle and plastic components. Replace nozzle cover, and re-install trigger sprayer on gallon container and begin application. Consult the product's Material Safety Data Sheet for complete product handling information.

STORAGE

7. Store container out of reach of children. Hook trigger handle onto conical plug assembly. Do not allow the trigger sprayer to be stored below the level of contents in the gallon container.
8. To maintain long term stability of sprayer and product, remove trigger sprayer from container after each use and allow product to drain back into container before removal. Seal container with original cap.



Part no. 14080

©1992 CRC Industries, Inc.
885 Louis Drive, Warminster, PA 18974
(215) 674-4300
92A